


MOTORBIKE SCANNER 5650 - FUNCTION TABLE REL.07

	Adiva	Aprilia	Arctic Cat	Benelli	Bimota	BMW	BRP CAN-AM	Buell	Cagiva	Daelim	Derbi	Ducati	Garelli	Gas Gas	Giler	Harley-Davidson	Honda	Hyosung	Kawasaki	KTM	KVN Motor	Kymco	Laverda	Malaguti	Mondial	Moto Guzzi	Moto Morini	MV Agusta	MZ	Peugeot	Piaggio	Polaris	Sherco	Suzuki	SYM	Triumph	Vespa	Voxan	Yamaha			
BODY COMPUTER (BMW only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Reading faults stored</i>																																										
<i>Erasing faults stored</i>																																										
<i>Parameters</i>																																										
<i>Diagnostic procedures</i>																																										
<i>ESA pre-load adjustment</i>																																										
<i>ESA shock-absorber position</i>																																										
INJECTION REGULATION	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Original value reset</i>																																										
<i>Regulation at idle</i>																																										
<i>Regulation at 10%</i>																																										
<i>Regulation at 25%</i>																																										
<i>Regulation at 50%</i>																																										
<i>Regulation at 75%</i>																																										
<i>Regulation at 100%</i>																																										
<i>FI adjustment</i>																																										
<i>IG adjustment</i>																																										
RADIO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Reading faults stored</i>																																										
<i>Erasing faults stored</i>																																										
<i>Parameters</i>																																										
<i>Diagnostic procedures</i>																																										
<i>Autoadaptive parameter reset</i>																																										
EPT (KTM only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Reading faults stored</i>																																										
<i>Erasing faults stored</i>																																										
<i>Parameters</i>																																										
<i>Diagnostic procedures</i>																																										
<i>Autoadaptive parameter reset</i>																																										
PARKING	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Reading faults stored</i>																																										
<i>Erasing faults stored</i>																																										
<i>Parameters</i>																																										
<i>Diagnostic procedures</i>																																										
<i>Self-configuration</i>																																										
<i>Potentiometer reset</i>																																										
<i>Lock activation</i>																																										
<i>Lower limit reset</i>																																										
TRANSMISSION	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			
<i>Ecu data</i>																																										
<i>Reading faults stored</i>																																										
<i>Erasing faults stored</i>																																										
<i>Parameters</i>																																										
<i>Diagnostic procedures</i>																																										
<i>Potentiometer reset</i>																																										
<i>Belt replacement</i>																																										
<i>Entering transmission stroke category</i>																																										
<i>Default transmission stroke value</i>																																										
EPS	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39			